

Wireless Setup guide – Huawei HG659

Login to Web User Interface


- 1 Connect a computer and the **Huawei HG659** using an Ethernet cable. (An Ethernet cable is provided with your **Huawei HG659**).
- 2 Open a web browser (such as Google Chrome or Mozilla Firefox), type following address into the address bar and press Enter.

The interface of the **Huawei HG659** modem is generally accessed via <http://192.168.1.1>

- 3 Enter the following credentials in the Username and Password fields:

Username: **(default is !!Huawei)**

Password: **(default is @HuaweiHgw)**

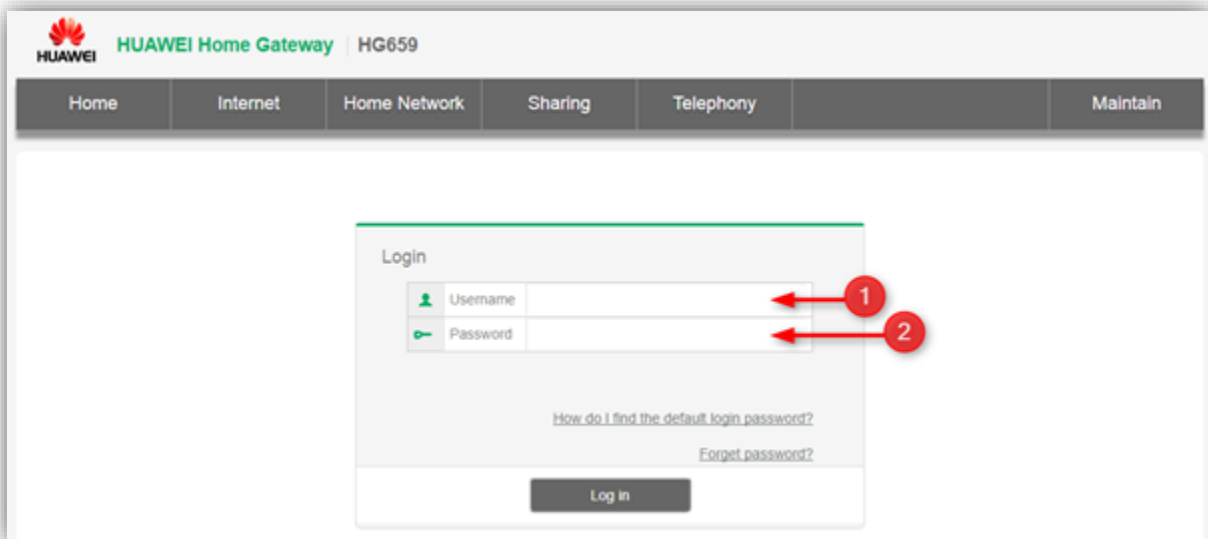


Wi-Fi 2.4GHz/WiFi 5GHz

The WiFi connection can be configured from this menu

Enable or Disable WiFi

Enable WLAN 2.4 GHz: Ticked if enabled (Un-tick to disable)

Enable WLAN 5 GHz: Ticked if enabled (Un-tick to disable)

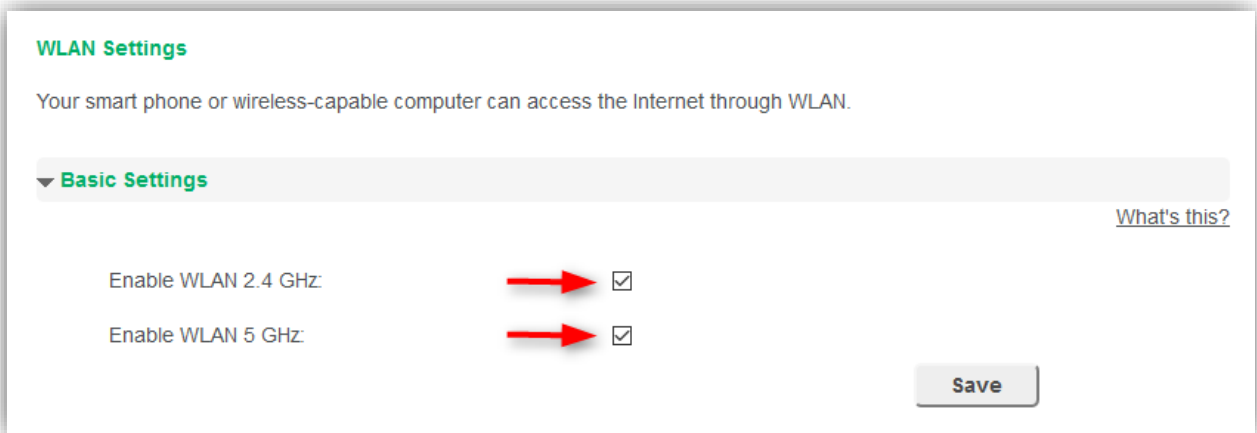

WLAN Settings

Your smart phone or wireless-capable computer can access the Internet through WLAN.

▼ **Basic Settings** [What's this?](#)

Enable WLAN 2.4 GHz:

Enable WLAN 5 GHz:

Save

- You can also enable or disable the WiFi connection from the WLAN button on the router
- Holding the button for up to 5 seconds will either Disable or Enable WiFi, based on it's current state.



- We recommend that you access the web interface over a wired connection (using Ethernet cable) to change the Wi-Fi security key/password.

- We also recommend that you change the Wi-Fi network name/SSID (e.g. Huawei 8386) before changing the Wi-Fi security key (Wi-Fi password).

Wireless – Basic

- 1 Change the name (SSID) of your WiFi Connection

Click on the **arrow** next to '**WLAN Encryption**' to expand the menu

Specifying an appropriate wireless network name for the two fields labeled '**SSID**' (**2.4Ghz & 5Ghz Frequency Band**) and then click '**Save**'

You can use the same name for both WiFi frequencies (Optional)

Expand

WLAN Encryption

2.4 GHz Frequency Band

SSID:

Enable SSID:

5 GHz Frequency Band

SSID:

Enable SSID:

Encryption Settings

Security mode:

WPA encryption mode:

WPA pre-shared key:

Show password:

Save

Wireless: Default setting is set to Enable. If you do not have any wireless devices, check the checkbox again to unselect.

Wireless – Security

Change the password (Key) of your WiFi Connection

Click on the arrow next to '**WLAN Encryption**' to expand the menu

Enter your desired password in the 'WPA pre-shared key' field and click '**Save**'

Expand

WLAN Encryption

2.4 GHz Frequency Band

SSID:

Enable SSID:

5 GHz Frequency Band

SSID:

Enable SSID:

Encryption Settings

Security mode: ▼

WPA encryption mode: ▼

WPA pre-shared key: **6**

Show password:

Save